

Kelvinator Inverter AC, Error

Category: Air Conditioner
written by www.mbsmpro.com | January 12, 2026

Kelvinator Inverter AC Error Code List

ERROR SIGNALS ON THE DISPLAY	
CODE	ERROR DESCRIPTION
E1	Indoor machine EE fault
E1	Indoor fan fault
E2	Indoor Fan Zone-crossing detection abnormal
E3	Indoor coil sensor fault
E4	Indoor ambient temperature sensor fault
E5	Outdoor EE fault
E6	Indoor and outdoor machine communication fault
F1	Compressor starting abnormal (phase failure, reverse)
F2	Compressor out of sleep fault
F3	PIF module fault
F4	Compressor shell roof fault/protection
F5	Discharge temperature sensor fault
F6	Suction temperature sensor fault
F7	Outdoor coil temperature sensor fault
F8	Outdoor ambient temperature sensor fault
F9	Outdoor DC fan fault
F10	Outdoor communication fault

When your Kelvinator inverter split air conditioner displays an error code (E1, E2, E3, F1, F2, F3, etc.), it is signaling a specific system fault. This comprehensive guide explains every major error code—from sensor failures and communication breakdowns to compressor and power module protection triggers—and provides professional troubleshooting steps.