

Compressor database chart Relay

Olp

Site: Mbsmpro

Date: December 26, 2025 | **Author:** www.mbsmpro.com

URL: <https://mbsmpro.com/compressor-database-chart-relay-olp/>



The specification(HP)	1/8	1/6	1/5	1/4	1/3	1/2	3/8
Compressor power(W)	93	125	150	180	245	375	275
Max Connection current(A)	3.0	3.6	4.25	4.75	5.30	6.50	6.0
Min release current(A)	2.6	3.0	3.35	3.75	4.25	5.0	



Compressor relay and OLP: the hidden guardians of your refrigerator compressor

Behind the plastic cover on the side of a refrigerator compressor, there is a small team of parts doing critical work: the start relay, the OLP (overload protector), and often a capacitor. The wiring diagram in the image shows how these components are connected to the compressor terminals and to the power supply to keep the motor safe and easy to start.

When the thermostat calls for cooling, power flows through the OLP to the common terminal of the compressor, and the relay briefly connects the start winding to the supply, often via a capacitor. Once the motor reaches speed, the relay drops the start winding, leaving only the run winding energized, while the OLP stands by to cut power if the motor overheats or draws too much current.

Key components in the wiring diagram

- **Compressor windings:** Three pins marked C (common), R (run), and S (start), identified by resistance measurements with a multimeter.
 - **Relay (PTC or current/voltage relay):** Connects the start winding during startup, then automatically disconnects it when current or voltage conditions change.
 - **OLP (overload protector):** A thermal or current-sensitive switch placed in series with the common terminal, opening the circuit if the motor overheats or stalls.
 - **Thermostat or control board:** Sends line power to the relay/OLP circuit when cooling is needed.
 - **Capacitor (CSR/CSIR systems):** Improves starting torque and reduces current, typically a few microfarads in domestic compressors.
-

Typical wiring logic in refrigerator diagrams

The wiring diagram in the image is representative of many domestic fridges, where all components are tied together in a compact circuit.

- Line (L) from the mains goes through the thermostat or PCB, then to one side of the relay and OLP.
- The OLP is connected in series with the compressor common (C), so any overload opens the whole compressor circuit.
- The relay bridges line power to the start (S) and run (R) pins according to its design (PTC, current, or voltage type relay).
- Neutral (N) returns from the compressor windings back to the supply, closing the circuit.

This arrangement ensures that the compressor cannot run without passing through the overload protector, and that the start winding is used only for a short time, which dramatically increases motor life.

Table: Typical compressor relay-OLP connections

Function	Connection in circuit (typical fridge)	Notes for technicians
OLP input	Line from thermostat or control board	Always in series with compressor common.
OLP output	Compressor C terminal	Opens on overload/overheat.
Relay common terminal	Line or OLP output (depending on design)	Feeds S and R during start.
Relay output to start (S)	Compressor start pin via PTC or coil contact	Energized only at startup.

Function	Connection in circuit (typical fridge)	Notes for technicians
Relay output to run (R)	Compressor run pin, sometimes via capacitor	Stays energized in running mode.
Capacitor connection	Between S and R (CSR) or between line and auxiliary winding	Improves torque and reduces current.

Testing relay and OLP safely

Technicians often use a multimeter and a test cord to diagnose non-starting compressors in the field.

- Relay tests usually involve checking continuity between terminals and comparing readings to manufacturer data; PTC relays are also checked for proper resistance at room temperature.
- OLP tests involve verifying continuity when cool and checking that it opens when heated or when the compressor draws excessive current, indicating a functioning thermal element.

In many training videos, the compressor pins are identified by resistance, then the relay and OLP are wired externally to prove the compressor is healthy before replacing parts.

***Why this diagram matters for Mbsmgroup,
Mbsm.pro, and mbsmpro.com***

For platforms like Mbsmgroup and Mbsm.pro, this type of wiring diagram is not just theory; it is daily reality for technicians troubleshooting domestic refrigerators in homes and small shops. Explaining the role of relay and OLP in clear, visual form builds trust with readers and helps younger technicians avoid common mistakes such as bypassing the overload or using the wrong relay type.

Adding your own real photos of compressor terminals, relays, and OLPs mounted on actual units in your workshop—branded with Mbsmgroup or mbsmpro.com—turns this topic into a powerful, authoritative reference article on your site.

Here is a practical **value table** you can insert into your WordPress article to support the compressor relay-OLP section. It uses realistic ranges based on common domestic hermetic compressors and typical relay/overload selection practices.

Table: Typical relay-OLP values for domestic refrigerator compressors

Approx. HP	Supply (V/Hz)	Typical FLA (A)	Typical LRA (A)	Recommended relay type	OLP trip current range (A)	Typical application
1/12 HP	220-240 V / 50	0.6-0.9	6-10	Small PTC relay module	1.2-1.6	Mini bar, very small refrigerator

Approx. HP	Supply (V/Hz)	Typical FLA (A)	Typical LRA (A)	Recommended relay type	OLP trip current range (A)	Typical application
1/10 HP	220-240 V / 50	0.8-1.1	8-14	PTC or solid-state relay	1.6-2.0	Single-door compact fridge
1/8 HP	220-240 V / 50	1.0-1.4	10-18	PTC / current relay	2.0-2.5	Small domestic fridge-freezer
1/6 HP	220-240 V / 50	1.3-1.8	14-24	PTC or CSR relay with capacitor	2.5-3.2	Standard top-freezer refrigerator
1/5 HP	220-240 V / 50	1.5-2.2	18-30	CSR relay (start capacitor + PTC/current)	3.0-3.8	Larger domestic fridge, small showcase
1/4 HP	220-240 V / 50	1.8-2.6	22-35	CSR relay with start capacitor	3.5-4.5	Large refrigerator / light commercial
1/3 HP	220-240 V / 50	2.3-3.5	30-50	High-torque CSR relay module	4.5-6.0	Commercial display, glass-door cooler

- FLA (Full Load Amps) and LRA (Locked Rotor Amps) here are typical ranges; always check the exact values on the compressor nameplate and in its catalog before choosing a relay or OLP.
- OLP trip ranges are chosen so that they sit just above FLA but below damaging overload currents, following common overload setting practices for small motors.

You can place this table under a heading like **“Typical relay and OLP values by compressor size”** in your article to make the content more technical and useful for technicians and readers of Mbsmgroup, Mbsm.pro, and mbsmpro.com.



Model	Connect current(A)	Release current(A)	Overload current(A)	Applied Temperature℃	Connect temperatur℃
117 μ 2010	2	1.6	4	105 ± 10	60 ± 10
117 μ 2030	3	2.6	5		
117 μ 2040	4	3.6	6.5		
117 μ 2050	4.6	4.2	6.5		



The specification(HP)	1/8	1/6	1/5	1/4	1/3	1/2	3/8
Compressor power(W)	93	125	150	180	245	375	275
Max Connection current(A)	3.0	3.6	4.25	4.75	5.30	6.50	6.0
Min release current(A)	2.6	3.0	3.35	3.75	4.25	5.0	




Compressor power(HP)	Compressor power Model		
		Max connect current(A)	Minimum release current(A)
1/12	B5A15	1.85	1.6
1/8	B8A10	2.43	2.07
1/6	B10A19	3	2.56
1/5	B12A12	3.5	2.95
1/4	B16A13	5.15	4.85
1/3	B9A11	7	5.9



The specification(HP)	1/12	1/10	1/8	1/7	1/6	1/5	1/4	1/3	1/2
Compressor power(W)	61	74	93	105	125	150	180	245	370
Max connect current(A)	2	2.5	3	3.3	3.6	4.75	5.35	6	7.5
Release current(A)	1.6	2	2.6	2.8	3	3.35	4.25	4.75	6



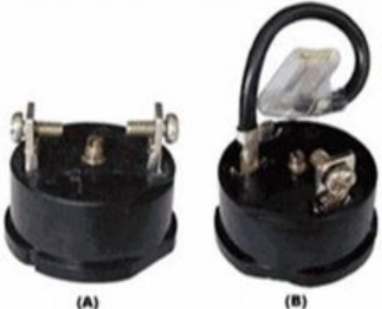

The specification(HP)	Overload current(A)	Movement temperature	Reply return temperature
3	35	125±10℃	60 ± 10℃
5	40		



The specification	Compressor power	Overload current(A)	Applied temperature	Restored temperature
JRT4-2/3	450W(2/3HP)	14	125-155℃	50-80℃
JRT4-10	750W(1HP)	16		
JRT4-13	975W(1.3HP)	20		
JRT4-15	1100W(1.5HP)	24		
JRT4-20	1500W(2HP)	30		

[mbsmpro-actrolcatalogue4-491to516Download](#)

																																																																									
<table border="1"> <thead> <tr> <th>Model</th> <th>Connect current(A)</th> <th>Release current(A)</th> <th>Overload current(A)</th> <th>Applied Temperature^oC</th> <th>Connect temperature^oC</th> </tr> </thead> <tbody> <tr> <td>117μ 2010</td> <td>2</td> <td>1.6</td> <td>4</td> <td rowspan="4">105 ± 10</td> <td rowspan="4">60 ± 10</td> </tr> <tr> <td>117μ 2030</td> <td>3</td> <td>2.6</td> <td>5</td> </tr> <tr> <td>117μ 2040</td> <td>4</td> <td>3.6</td> <td>6.5</td> </tr> <tr> <td>117μ 2050</td> <td>4.6</td> <td>4.2</td> <td>6.5</td> </tr> </tbody> </table>	Model	Connect current(A)	Release current(A)	Overload current(A)	Applied Temperature ^o C	Connect temperature ^o C	117μ 2010	2	1.6	4	105 ± 10	60 ± 10	117μ 2030	3	2.6	5	117μ 2040	4	3.6	6.5	117μ 2050	4.6	4.2	6.5	<table border="1"> <thead> <tr> <th>The specification(HP)</th> <th>1/8</th> <th>1/6</th> <th>1/5</th> <th>1/4</th> <th>1/3</th> <th>1/2</th> <th>3/8</th> </tr> </thead> <tbody> <tr> <td>Compressor power(W)</td> <td>93</td> <td>125</td> <td>150</td> <td>180</td> <td>245</td> <td>375</td> <td>275</td> </tr> <tr> <td>Max Connection current(A)</td> <td>3.0</td> <td>3.6</td> <td>4.25</td> <td>4.75</td> <td>5.30</td> <td>6.50</td> <td>6.0</td> </tr> <tr> <td>Min release current(A)</td> <td>2.6</td> <td>3.0</td> <td>3.35</td> <td>3.75</td> <td>4.25</td> <td>5.0</td> <td>4.75</td> </tr> </tbody> </table>		The specification(HP)	1/8	1/6	1/5	1/4	1/3	1/2	3/8	Compressor power(W)	93	125	150	180	245	375	275	Max Connection current(A)	3.0	3.6	4.25	4.75	5.30	6.50	6.0	Min release current(A)	2.6	3.0	3.35	3.75	4.25	5.0	4.75															
Model	Connect current(A)	Release current(A)	Overload current(A)	Applied Temperature ^o C	Connect temperature ^o C																																																																				
117μ 2010	2	1.6	4	105 ± 10	60 ± 10																																																																				
117μ 2030	3	2.6	5																																																																						
117μ 2040	4	3.6	6.5																																																																						
117μ 2050	4.6	4.2	6.5																																																																						
The specification(HP)	1/8	1/6	1/5	1/4	1/3	1/2	3/8																																																																		
Compressor power(W)	93	125	150	180	245	375	275																																																																		
Max Connection current(A)	3.0	3.6	4.25	4.75	5.30	6.50	6.0																																																																		
Min release current(A)	2.6	3.0	3.35	3.75	4.25	5.0	4.75																																																																		
																																																																									
<table border="1"> <thead> <tr> <th rowspan="2">Compressor power(HP)</th> <th rowspan="2">Compressor powe Model</th> <th colspan="2"></th> </tr> <tr> <th>Max connect current(A)</th> <th>Minimum release current(A)</th> </tr> </thead> <tbody> <tr> <td>1/12</td> <td>B5A15</td> <td>1.85</td> <td>1.6</td> </tr> <tr> <td>1/8</td> <td>B8A10</td> <td>2.43</td> <td>2.07</td> </tr> <tr> <td>1/6</td> <td>B10A19</td> <td>3</td> <td>2.56</td> </tr> <tr> <td>1/5</td> <td>B12A12</td> <td>3.5</td> <td>2.95</td> </tr> <tr> <td>1/4</td> <td>B16A13</td> <td>5.15</td> <td>4.85</td> </tr> <tr> <td>1/3</td> <td>B9A11</td> <td>7</td> <td>5.9</td> </tr> </tbody> </table>		Compressor power(HP)	Compressor powe Model			Max connect current(A)	Minimum release current(A)	1/12	B5A15	1.85	1.6	1/8	B8A10	2.43	2.07	1/6	B10A19	3	2.56	1/5	B12A12	3.5	2.95	1/4	B16A13	5.15	4.85	1/3	B9A11	7	5.9	<table border="1"> <thead> <tr> <th>The specification(HP)</th> <th>1/12</th> <th>1/10</th> <th>1/8</th> <th>1/7</th> <th>1/6</th> <th>1/5</th> <th>1/4</th> <th>1/3</th> <th>1/2</th> </tr> </thead> <tbody> <tr> <td>Compressor power(W)</td> <td>61</td> <td>74</td> <td>93</td> <td>105</td> <td>125</td> <td>150</td> <td>180</td> <td>245</td> <td>370</td> </tr> <tr> <td>Max connect current(A)</td> <td>2</td> <td>2.5</td> <td>3</td> <td>3.3</td> <td>3.6</td> <td>4.75</td> <td>5.35</td> <td>6</td> <td>7.5</td> </tr> <tr> <td>Release current(A)</td> <td>1.6</td> <td>2</td> <td>2.6</td> <td>2.8</td> <td>3</td> <td>3.35</td> <td>4.25</td> <td>4.75</td> <td>6</td> </tr> </tbody> </table>		The specification(HP)	1/12	1/10	1/8	1/7	1/6	1/5	1/4	1/3	1/2	Compressor power(W)	61	74	93	105	125	150	180	245	370	Max connect current(A)	2	2.5	3	3.3	3.6	4.75	5.35	6	7.5	Release current(A)	1.6	2	2.6	2.8	3	3.35	4.25	4.75	6
Compressor power(HP)	Compressor powe Model																																																																								
		Max connect current(A)	Minimum release current(A)																																																																						
1/12	B5A15	1.85	1.6																																																																						
1/8	B8A10	2.43	2.07																																																																						
1/6	B10A19	3	2.56																																																																						
1/5	B12A12	3.5	2.95																																																																						
1/4	B16A13	5.15	4.85																																																																						
1/3	B9A11	7	5.9																																																																						
The specification(HP)	1/12	1/10	1/8	1/7	1/6	1/5	1/4	1/3	1/2																																																																
Compressor power(W)	61	74	93	105	125	150	180	245	370																																																																
Max connect current(A)	2	2.5	3	3.3	3.6	4.75	5.35	6	7.5																																																																
Release current(A)	1.6	2	2.6	2.8	3	3.35	4.25	4.75	6																																																																
																																																																									
<table border="1"> <thead> <tr> <th>The specification(HP)</th> <th>Overload current(A)</th> <th>Movement temperature</th> <th>Reply return temperature</th> </tr> </thead> <tbody> <tr> <td>3</td> <td>35</td> <td rowspan="2">125±10^oC</td> <td rowspan="2">60 ± 10^oC</td> </tr> <tr> <td>5</td> <td>40</td> </tr> </tbody> </table>		The specification(HP)	Overload current(A)	Movement temperature	Reply return temperature	3	35	125±10 ^o C	60 ± 10 ^o C	5	40	<table border="1"> <thead> <tr> <th>The specification</th> <th>Compressor power</th> <th>Overload current(A)</th> <th>Applied temperature</th> <th>Restored temperature</th> </tr> </thead> <tbody> <tr> <td>JRT4-2/3</td> <td>450W(2/3HP)</td> <td>14</td> <td rowspan="5">125-155^oC</td> <td rowspan="5">50-80^oC</td> </tr> <tr> <td>JRT4-10</td> <td>750W(1HP)</td> <td>16</td> </tr> <tr> <td>JRT4-13</td> <td>975W(1.3HP)</td> <td>20</td> </tr> <tr> <td>JRT4-15</td> <td>1100W(1.5HP)</td> <td>24</td> </tr> <tr> <td>JRT4-20</td> <td>1500W(2HP)</td> <td>30</td> </tr> </tbody> </table>		The specification	Compressor power	Overload current(A)	Applied temperature	Restored temperature	JRT4-2/3	450W(2/3HP)	14	125-155 ^o C	50-80 ^o C	JRT4-10	750W(1HP)	16	JRT4-13	975W(1.3HP)	20	JRT4-15	1100W(1.5HP)	24	JRT4-20	1500W(2HP)	30																																						
The specification(HP)	Overload current(A)	Movement temperature	Reply return temperature																																																																						
3	35	125±10 ^o C	60 ± 10 ^o C																																																																						
5	40																																																																								
The specification	Compressor power	Overload current(A)	Applied temperature	Restored temperature																																																																					
JRT4-2/3	450W(2/3HP)	14	125-155 ^o C	50-80 ^o C																																																																					
JRT4-10	750W(1HP)	16																																																																							
JRT4-13	975W(1.3HP)	20																																																																							
JRT4-15	1100W(1.5HP)	24																																																																							
JRT4-20	1500W(2HP)	30																																																																							

Latest Articles

- [Guide de Dépannage de la Carte Inverter : Climatiseur Kolin KSM-IW20WAE](#)
- [RCFF-2HP Capillary Tube for a Samsung 18000 BTU air conditioner](#)
- [Carbon brushes washing machine motors](#)
- [Chauffe-eau Junkers : Restauration d'un Classique](#)
- [WS57H Compressor, 1/6 hp, Capacitor Requirement 4mf](#)
- [Hisense inverter expert, installation](#)
- [Copeland D3DS5-100X 10 HP Freezer Compressor](#)
- [Bitzer 6G-30.2Y: The High-Performance 30 HP Semi-Hermetic](#)
- [Réparer un chauffe-eau à gaz Olympic 6L](#)

- Best piping practices for semi-hermetic systems
- Core ChauffeEau Junkers Mid-1980s to Late 1990s
- Not recommended R410A to R407c
- Details of refrigerant R134a
- The electrical circuit for a timer-based steam refrigerator is an interesting one
- Changing Filter 1/5 Hp
- 1/5 HP Compressor oil change: How much and how to do it right
- Deep cleaning AC units from A to Z... that's our craft
- Plumbing Fittings Explained
- Can the GL80 compressor be installed in place of the GL90?
- The process of replacing the air conditioner compressor is successful, and it is working as it was before ?